

COMPACT POLICE CELL UNIT INSTALLATION INSTRUCTIONS

MODEL NO: SPCL-M
PRODUCT CODE: CP2010 OR CP2011

S Trap Compact:


1. Place unit in required position.
2. Mark Position of the four holes on base of unit.
3. Drill holes using a 12mm masonry drill bit.
4. Place 12mm dynabolts in holes and lower unit into position and secure.

Rear Bracket:

1. Insert 12mm threaded rod (supplied) into inside holes of restraining t/ bar and screw into the welded nuts on top half of unit.
2. Repeat process for bottom restraining bar.
3. Tighten the brackets to wall using washers and nuts (supplied).
4. A bead of silicone is squeezed between unit and wall to eliminate gaps.

P Trap Compact:

1. Toggle bracket (supplied) is placed on floor in a central position.
2. Drill holes using a 9mm drill bit.
3. Place 9mm dynabolts in holes and secure bracket.
4. Slide unit into position so that toggle bracket enters locating bracket on base of unit.
5. Follow S trap instructions for completion on fixing.

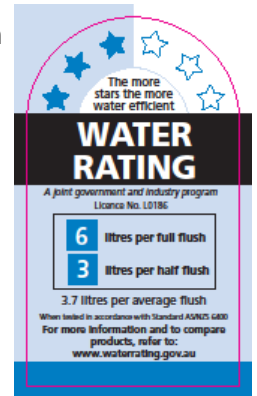

WELS registration number

L03325—"S" trap ,
L03326—"P" trap



STANDARDS AUSTRALIA
LIC. 0585
PAN CAP. 6L/3L
MATCHING CISTERN
WATER WAFER

SOUTHERN CROSS
LASER & SHEET METAL

**23-27 Clapham Road
Regents Park NSW 2143**

Ph: 02 9644 2811
Email office@sclaser.org