

WALLFACE PAN INSTALLATION INSTRUCTIONS

MODEL NO: STTS / STTP
PRODUCT CODE: TP2002 OR TP2003

S Trap Wallface pan :

Place unit in required position.
Mark Position of the four holes on base of unit.
Drill holes using a 12mm masonry drill bit.
Place 12mm dynabolts in holes and lower unit into position and secure.

Rear Bracket:

Insert 12mm threaded rod (supplied) into inside holes of restraining t/ bar and screw into the welded nuts on top half of unit.
Repeat process for bottom restraining bar.
Tighten the brackets to wall using washers and nuts (supplied).
A bead of silicone is squeezed between unit and wall to eliminate gaps.


P Trap Wallface Pan:

Toggle bracket (supplied) is placed on floor in a central position.
Drill holes using a 9mm drill bit.
Place 9mm dynabolts in holes and secure bracket.
Slide unit into position so that toggle bracket enters locating bracket on base of unit.
Follow S trap instructions for completion on fixing.




STANDARDS AUSTRALIA
LIC. W585
PAN CAP. 6L/3L
MATCHING CISTERN
WATER WAFER
DUAL FLUSH

WELS registration number
L03330 - "S" trap
L03329—"P" trap

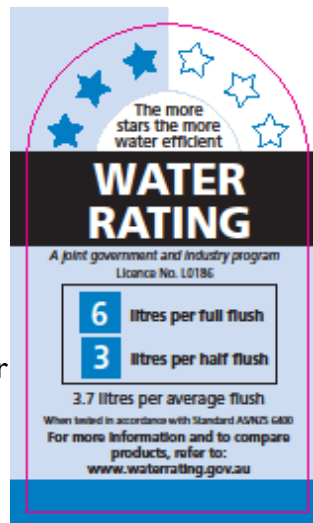

Note: These instructions are recommendations only, all care has been taken, but no responsibility will be accepted as S.C.S.S. are not licensed plumbers. Refer to the Plumbing Code AS/NZS3500.

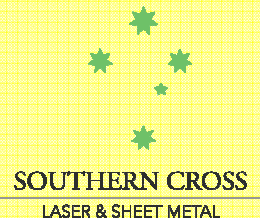

**23-27 Clapham Road
Regents Park NSW 2143**

Ph: 02 9644 2811
Email office@scclaser.org